



**Note:** This IBM PC BIOS API call is for DOS/Win16 personality only. Use [Family API](#) for portability.

**Note:** [osFree Macro Library](#) provides macros for most of functions

2022/03/13 05:41 · prokushev · [0 Comments](#)

# Int 10H, AH=01H

## Version

IBM 5150 and higher

## Brief

Set Cursor Size

## osFree Macro Library

[@SetCurSz](#)

## Family API

[VioSetCurType](#)

## Parameters

```
AH = 01h
CH = Start line
CL = End line
```

## Return

none

## Notes

- buggy on EGA systems–BIOS remaps cursor shape in 43 line modes, but returns unmapped cursor shape
- UltraVision scales size to the current font height by assuming 14-line monochrome and 8-line color fonts; this call is not valid if cursor emulation has been disabled
- applications which wish to change the cursor by programming the hardware directly on EGA or above should call INT 10/AX=1130h or read 0040h:0085h first to determine the current font height
- on some adapters, setting the end line greater than the number of lines in the font will result in the cursor extending to the top of the next character cell on the right
- AMI 386 BIOS and AST Premier 386 BIOS will lock up the system if AL is not equal to the current video mode
- Text based on [Ralf Brown Interrupt List Release 61](#)

<b>IBM PC BIOS API</b>	
Video I/O	<a href="#">INT 10H</a> : 00H, 01H, 02H, 03H, 05H, 06H, 07H, 08H, 09H, 0AH, 0BH, 0CH, 0DH, 0EH, 0FH
Hardware info	<a href="#">INT 11H</a> , <a href="#">INT 12H</a>
Serial I/O	<a href="#">INT 14H</a> : 00H, 01H, 02H, 03H
Tape I/O	<a href="#">INT 15H</a> : 00H, 01H, 02H, 03H
Keyboard I/O	<a href="#">INT 16H</a> : 00H, 01H, 02H
Printer I/O	<a href="#">INT 17H</a> : 00H, 01H, 02H
Disk I/O	<a href="#">INT 13H</a> : 00H, 01H, 02H, 03H, 04H, 05H
Date and Time	<a href="#">INT 1AH</a> : 00H, 01H
<b>osFree Macro Library</b>	
Video I/O	<a href="#">@SetMode</a> <a href="#">@SetCurSz</a> <a href="#">@SetCurPos</a> <a href="#">@GetCur</a> <a href="#">@SetPage</a> <a href="#">@ScrollUp</a> <a href="#">@ScrollDn</a> <a href="#">@Scroll</a> <a href="#">@GetChAtr</a> <a href="#">@PutChAtr</a> <a href="#">@PutCh</a> <a href="#">@SetPalet</a> <a href="#">@SetColor</a> <a href="#">@SetDot</a> <a href="#">@GetDot</a> <a href="#">@WrtTTY</a> <a href="#">@VideoState</a> <a href="#">@GetMode</a> <a href="#">@GetDisplay</a> <a href="#">@GetVideoState</a> <a href="#">@GetEGAInfo</a> <a href="#">@Cls</a>
Hardware info	<a href="#">@Equipment</a> <a href="#">@MemSize</a>
Serial I/O	<a href="#">@AuxInit</a> <a href="#">@AuxSendChar</a> <a href="#">@AuxRecieveChar</a> <a href="#">@AuxStatus</a>
Tape I/O	<a href="#">@TapeOn</a> <a href="#">@TapeOff</a> <a href="#">@TapeRead</a> <a href="#">@TapeWrite</a>
Keyboard I/O	<a href="#">@KbdStatus</a> <a href="#">@CharIn</a> <a href="#">@CharPeek</a>
Printer I/O	<a href="#">@PrnPrint</a> <a href="#">@PrnInit</a> <a href="#">@PrnStatus</a>
Disk I/O	<a href="#">@DskReset</a> <a href="#">@DskStatus</a> <a href="#">@DskRead</a> <a href="#">@DskWrite</a> <a href="#">@DskVerify</a> <a href="#">@DskFormat</a>
Date and Time	<a href="#">@SetTime</a> <a href="#">@GetTime</a>
Mouse	<a href="#">@MouInit</a> <a href="#">@MouShowPointer</a> <a href="#">@MouStatus</a> <a href="#">@MouSetPos</a> <a href="#">@MouSetMickey</a> <a href="#">@MouRegion</a>
Memory manager	<a href="#">@ModBlok</a> <a href="#">SET_BLOCK</a>

2022/10/04 14:28 · [prokushev](#) · [0 Comments](#)

2022/03/13 05:54 · [prokushev](#) · [0 Comments](#)

Family API		
DOS	Process Manager	DosBeep DosExit DosSleep DosExecPgm
	File Manager	DosChDir DosChgFilePtr DosClose DosDelete DosDupHandle DosMkDir DosMove DosQCurDir DosQCurDisk DosSetFileMode DosOpen DosQFileInfo DosRead DosQFileMode DosQFSInfo DosQVerify DosRmdir DosSelectDisk DosFindClose DosFindFirst DosFindNext DosSetFileInfo DosSetVerify DosWrite DosFileLocks DosSetFHandState DosNewSize DosBufReset DosQFHandState DosSetFSinfo DosShutdown
	Memory Manager	DosFreeSeg DosSubAlloc DosSubFree DosSubSet DosAllocHuge DosAllocSeg DosReallocHuge DosReallocSeg DosGetHugeShift DosCreateCSAlias
	NLS	DosCaseMap DosGetCtryInfo DosGetDBCSEv DosSetCtryCode DosGetCollate DosGetMessage DosInsMessage DosPutMessage
	Date and Time	DosSetDateTime DosGetDateTime
	Devices	DosDevConfig DosDevIOct1 DosDevIOct2
	Signals	DosHoldSignal DosSetSigHandler
	Misc	BadDynLink DosGetEnv DosGetMachineMode DosGetVersion DosError DosErrClass DosSetVec
KBD	KbdCharIn KbdFlushBuffer KbdGetStatus KbdSetStatus KbdStringIn KbdPeek	
VIO	VioGetBuf VioGetConfig VioGetCurPos VioGetCurType VioGetPhysBuf VioReadCellStr VioReadCharStr VioScrollUp VioScrollDn VioScrollLf VioScrollRt VioScrUnLock VioSetCurPos VioSetCurType VioSetMode VioGetMode VioShowBuf VioWrtCellStr VioWrtCharStr VioWrtCharStrAtt VioWrtNAttr VioWrtNCell VioWrtNChar VioWrtTTY VioScrLock VioPopUp	
Tools	BIND	
Modules	DOSCALLS.DLL VIOCALLS.DLL KBDCALLS.DLL MSG.DLL	
Libraries	API.LIB OS2386.LIB FAPI.LIB DOSCALLS.LIB SUBCALLS.LIB	

2018/08/25 15:05 · prokushev · 0 Comments

From:  
<https://osfree.org/doku/> - **osFree wiki**

Permanent link:  
<https://osfree.org/doku/doku.php?id=en:docs:bios:api:int10:01&rev=1669346719>

Last update: **2022/11/25 03:25**

